WINEGARD®
Gateway & Gateway Pro

Models: GW-1000, GW-PRO1



PROTECTED BY WINEGARD 2 YEAR LIMITED WARRANTY

DESIGNED AND MANUFACTURED IN USA

User Guide

4G LTE WIFI ROUTER

AIR™ 360 Plus ANTENNA REQUIRED FOR USE

WINEGARD - **RV HALO** APP

DOWNLOAD **FREE**

Download on the App Store

GET IT ON Google Play

Place label here

SCAN FOR

MORE PRODUCT INFORMATION

SUPPORT

WARRANTY

Winegard Company 2736 Mt. Pleasant St. | Burlington, IA 52601

AT&T and the Globe Logo are owned by AT&T Intellectual Property. Verizon Wireless is a trademark of Verizon Trademark Services, LLC. T-Mobile, the magenta color, and the digits design are registered and/or unregistered trademarks of Deutsche Telekom AG. Rogers is a trademark of Rogers Communications Inc. All trademarks, registered trademarks and logos are the property of their respective owners and are not affiliated with Winegard Company.

WINEGARD®

Printed in U.S.A. © 2019 Winegard Company
Rev4 6-25 2452438

WELCOME

Congratulations on your Winegard® Gateway™ purchase! Thank you for trusting Winegard to bring connectivity solutions to you while on the go. This product, combined with the Winegard Air™ 360 Plus, will provide you more freedom when choosing where to adventure, all while bringing the comforts of TV and secure internet to you and your devices. Please read this manual as it contains installation, maintenance, and usage information.

CONTENTS

What's in the Box 2
Product Information 3
Specifications 4
LED Definitions 4
Connection Overview 5
Installation 6
Installation Diagram 7
Web Operation 8
Swapping the SIM 10
Cellular Settings 11
Network Settings 12
Advanced Settings 13
Reset Device 14
Multi-Wan Setup 16
Starlink Integration 17
RV Halo App Setup 18
Buying Data 24
RV Halo Smart Sensors 26
FCC Statement 27

What's in the Box

- Gateway Router
- Mounting Plate
- FreedomGo SIM Card *(installed)*
  - ATT
  - Verizon
- Installation Hardware
- Power Cable
- Manual

WARNINGS:

- Read this manual carefully and completely before attempting operate this product.
- DO NOT LOSE THIS MANUAL. It contains your unique factory default SSID and password.
- Do not paint any portion of the Winegard Gateway. Painting the system could damage the system and will void the warranty.
- For security reasons, it is recommended to change the factory default network names(Winegard2ghXXXXXX) along with the default password. A unique SSID helps you recognize your network from others, especially in areas with multiple networks.
- When first setting up the Winegard Gateway, it is recommended to check for software updates once the system is connected to an Internet source. It is also recommended to check for updates every couple months for fixes and added features.
- Service will not work in Mexico. Some Winegard FreedomGO Data Plans work in the US Only and some work in US and Canada. Verify the correct plan before purchasing.
- At the time this manual is written, the Gateway will work with the Winegard Data Plan, AT&T®, T-Mobile®, and Verizon®.

PRODUCT INFORMATION

The Winegard Gateway has been designed for use only with the Winegard Air 360 Plus system and will not operate as a standalone accessory. The Air 360 Plus is compatible RVs with a roof-radius of 230 inches to flat and a 7-inch max. roof thickness. If needed, cable extensions can be purchased through Winegard.

RV Manufacturer Install

Many RV manufacturers have chosen to factory install the Air 360 Plus and prewire both +12VDC and the WiFi/4G antenna cables. These will be located directly behind a cap (shown on Page 5) on the RV's ceiling. If this is the case, remove the cap to access the wiring. Once you've found the +12VDC wiring and three-color coded antenna cables (Red, Yellow, and Green) you can continue to the Installation section (Page 5).

Aftermarket Install

If your vehicle does not have an Air 360 Plus antenna installed, please contact your local RV dealer for information on having one installed. It is recommended to install the Air 360 Plus before attempting to install the Gateway system as the Gateway must be installed directly under the Air 360 Plus. 12VDC must be present where the Gateway is to be mounted. Please refer to the Air 360 Plus manual for correct installation instructions.

Gateway 4G Compatibility

- Air 360 Plus
- Air 360 Plus 5G* (Will only get 4G)
- Air 360 LP Plus 4G**
- Air 360 LP Plus 5G (Will only get 4G)**

*The Air 360 Plus 5G will have 5 cables entering the RV. Only the Red (WiFi), 1 Yellow (cellular), and 1 Green (cellular) cable are required for the Gateway 4G.

**The Air 360 LP antennas will only have 1 Red (WiFi) and either 2 Green cables or 4 Green cables. The Gateway 4G only requires the Red cable and any of the 2 Green cables.

SPECIFICATIONS

Wireless Standard: 802.11b/g/n or 802.11ac (GW-PRO1)

Frequency Band: LTE: B2, B4, B5, B12, B13, B14, B66, B71

Wireless Speed: 2.4 GHz: 300 Mbps
5 GHz: 866 Mbps (ONLY ON GW-PRO1)

Max 4G LTE Speed: 150 Mbps download

Wireless Security: WPA-PSK, WPA2-PSK, Mixed

Antennas:

WiFi: (1) in Gateway & (1) in Air 360 Plus
4G LTE: (2) in Air 360 Plus
GPS: (1) in Gateway

WiFi Range: Up to 1/3 mile

SIM Card Port (Dual): Mini SIM (2FF) - (25mm x 15mm x 0.76mm)

Compatible Carriers: Winegard FreedomGO, Verizon, AT&T, T-Mobile
For complete list of compatible carriers: www.winegard.com/connect

Power Rating: DC 9-16V, 1A

Operating Temperature Range: -30°C to +70°C (-22°F to +158°F)

Weight: 0.8 lb.

Dimensions: 8.13"l x 8.13"w x 1.68"d

Warranty & Support:

Warranty: 2 Years Parts, 1 Year Labor


Support: Complimentary Telephone and Email Support
Online Technical Manuals and Instructions
Large Dealer Support Network

Setup Requirements: Minimum Wireless 802.11 b/g/n 2.4 GHz network; Winegard Air 360 Plus antenna; computer, tablet, or smartphone with a web browser; Winegard RV Halo app (optional)

LED DEFINITIONS

LED DEFINITION - LOCATED ON BACKSIDE OF GATEWAY:	
LED OFF	System is powered down.
SOLID RED	System is booting up.
FAST BLINKING GREEN	System is initializing.
FAST BLINKING YELLOWISH-GREEN	System is up and waiting for an Internet connection.
SOLID GREEN	System is connected to the Internet.
ALTERNATING GREEN/ORANGE	System is being updated with new software.

CONNECTION OVERVIEW

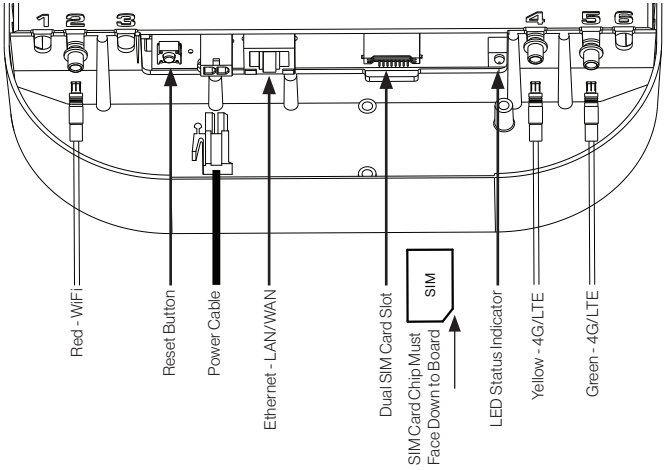

INSTALLATION


If the Air 360 Plus system was installed at the RV manufacturer, you should notice a white circular Winegard cable access cap on the ceiling of your RV, directly below where the Air 360 Plus is installed. If the Air 360 Plus was not previously installed, refer to the Air 360 Plus installation instructions before attempting to mount the Gateway system.



Note: When mounting the Gateway to the ceiling, it MUST be mounted directly under the Air360 Plus to ensure the WiFi and 4G LTE antenna cables reach the Gateway connections.

Step 1 - Remove the two screws that secure the access cap to the ceiling and gently pull the +12VDC power cables and three smaller antenna cables down through the hole. If any of these cables are missing, please contact your coach manufacturer or installing dealer.

Step 2 - Pull the cables through the guide hole of the mounting bracket and align this hole with the hole in the ceiling of the RV. Make sure that the bracket is in a parallel position with the walls of the RV. Once in position, secure the mounting plate to the ceiling of the RV with four screws included in the mounting hardware.

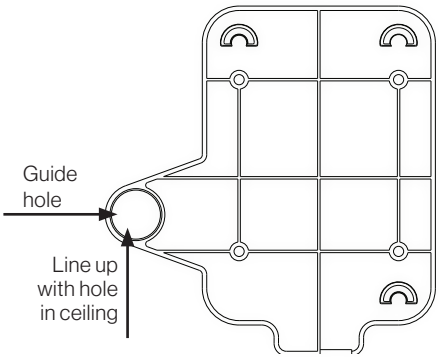


Step 3 - Next, with the provided two wire nuts, splice the included 9.5" power cable and the power cable that the RV Manufacturer installed. Connect the black wire to the ground wire from the RV, and the red wire to the power wire from the RV. Ensure that the cables are secure to the wire nuts before continuing. If the power switch was already installed from the OEM discard the included wall plate and power switch and continue to Step 13.

Note: If the power wire was not installed, you will need to install your own power wire. It is recommended to use 18-guage wire, no longer than 50 feet with a dedicated 12VDC circuit and a 3A fuse. See Air360 Plus installation manual for more information.

INSTALLATION (CONTINUED)

Step 4 - Choose a location to install the supplied Wall Plate with Power On/ Off switch. When selecting a location, remember that a +12VDC power cable will need to be run from the Gateway to the switch.

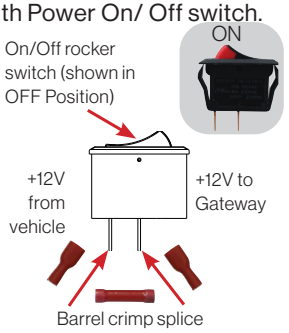

Step 5 - For a wall or panel mount, drill or use a hole saw to create a 1¼" hole. Pull the power cable from the Gateway and the RV's power wires through the wall or panel.

Step 6 - Be sure the switch is in the OFF (O) position before continuing. Slide the power switch into the wall plate.


Step 7 - Connect the +12V power wire from the vehicle to a small red terminal insulator. Crimp the connector.

Step 8 - Connect this small red terminal insulator to the isolated spade of the power switch.

Step 9 - Connect the red wire from the Gateway to the other small red terminal insulator. Crimp the connector.

Step 10 - Connect this small red terminal insulator to the middle spade on the switch.

Step 11 - Slide the ground wire from the vehicle into one end of the barrel crimp splice and slide the black ground wire from the Gateway into the opposite end of the splice. Crimp the splice.

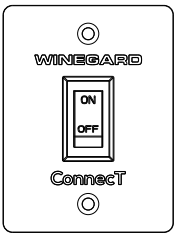


Power switch into wall plate

Step 12 - Mount the wall plate to the wall or panel with the two supplied wall plate screws.


Step 13 - Now is time to connect the exterior antennas to the Gateway. Connect the WiFi cable with the red tubing to the mating connector that is designated in the #2 slot.

Step 14 - Connect the 4G LTE cables with their respective mating connectors (Yellow - #4 slot and Green - #5 slot).

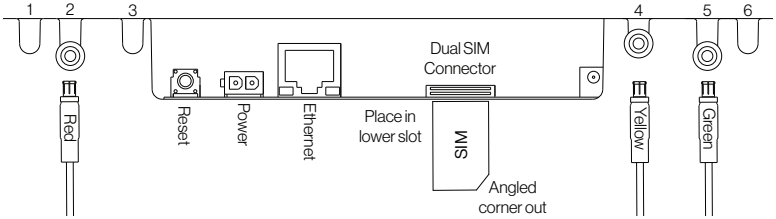

Step 15 - Before connecting the power cable to the Gateway confirm that all other connections are properly made. If so, connect the power cable. Turn the wall plate power switch to the ON position and verify that the LED on the backside of the Gateway illuminates.

Step 16 - Lastly, feed all excess cabling back into the hole of the ceiling and push the backside of the Gateway up onto the mating hooks. There will be two on the side opposite the cabling hole and one on the same side as the cabling hole. Once the Gateway is secure to the hooks, slide the Gateway towards the release lever until it locks into place. A clicking sound indicates the Gateway is locked in position.

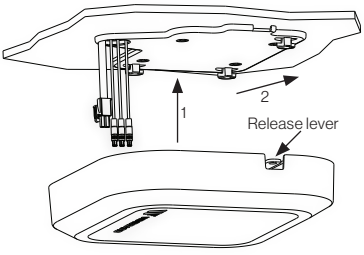


INSTALLATION DIAGRAM

WEB OPERATION

Note: To access the Winegard Control Panel we recommend web browsers Microsoft Edge, Firefox, Safari, and Google Chrome.

Warning: For first time users - On the initial setup, your Winegard may have to reconfigure the modem. If this occurs, expect an additional 1-2 minutes of delay before the Winegard Router can be used. **DO NOT CLICK THE BACK BUTTON** on your web browser when navigating through this software.

Step 1 - Turn the Winegard power switch ON. Turn on the WiFi enabled device(s) that you want to connect and scan for wireless networks. It may take a few minutes for the Winegard network to appear.

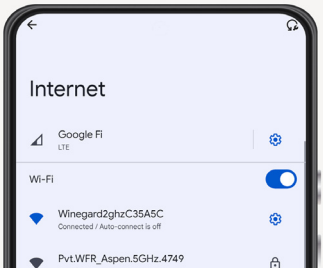

Step 2 - The label located on the front of this manual lists the unique default SSID and password. Select this WiFi network from the list and enter the correct password.

Note: It is recommended to set your device(s) to automatically reconnect with the Winegard network.




Note: For security reasons, it is recommended to change the factory default network names (Winegard2ghXXXXXX AND Winegard5ghzXXXXXX) along with the default password shown on page 12. A unique SSID helps you recognize your network from others, especially in areas with multiple networks.

Step 3 - Once connected, open your device's Internet browser and type 10.11.12.1 into the address bar and press Enter. This will take you to the Admin Login page. Login using the following:

USERNAME: admin

PASSWORD: admin

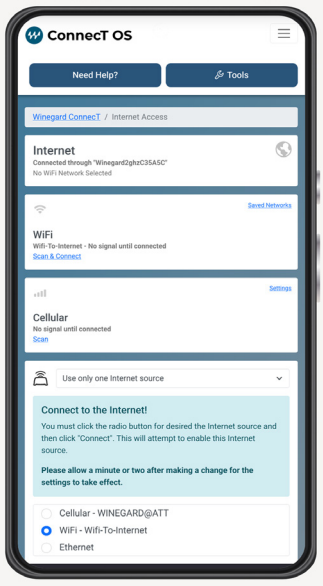

The Winegard can access the internet three ways: from a local WiFi network, a cellular network, or a wired WAN.

Step 4 - To connect to a **WiFi** network, select WiFi from the Internet Access options and then click on **Scan & Connect**. This will bring up a list of all WiFi signals in range (this will take around 30 seconds).

WEB OPERATION (CONTINUED)

Step 5 - The list of available networks will be displayed by signal strength. Select the desired network (SSID) and click **CONNECT**.

Step 6 - Enter the network password, if prompted and click **Continue**. Once the Winegard connects to the internet the **INTERNET** field will show Connected (this could take up to two minutes). You are now ready to use the WiFi.


> **Note:** Some networks will display a "splash page" when connecting instead of using a network password. When connecting to a network requiring a splash page for multiple days, it may be necessary to clear your browser cache.

Step 7 - To connect to a Cellular network, select Cellular from the internet access options. Then click **Connect**. If you have available data to use, the INTERNET STATUS should display Connected to Cellular "Winegard ConnecT Data Plan". You are now ready to use the cellular connection. If you do not have any available data, the Internet Status field will display Denied Access. You will have to add data in order to use the cellular connection.

Step 8 - To add data, you must be connected to an internet source. If needed, connect to a WiFi source (steps 4-6). Once connected, from the Home page, select the DATA PLAN link. On the Data Plan page, you can see how much data you have remaining or click the link in the subscription field. Here you can sign in and view your account or set up a new account. When creating a new account enter the Account Registration form and select Save. Once this is complete you can choose the FreedomGO plan that is right for you.





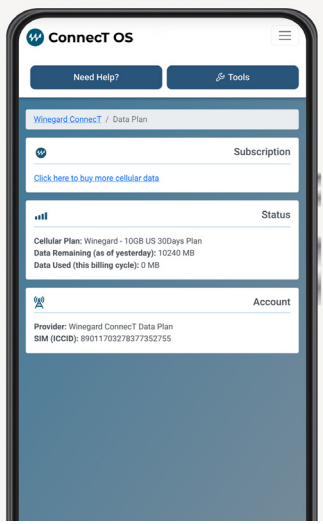

> **WARNING:** Connecting to the internet through cellular will consume data from your Winegard FreedomGO data plan.

NOTE: Once you have a Winegard account for your system you may purchase data any time by signing into your account at rvhalo.com or using the RV Halo app. This can be done away from your RV.

NOTE: All data plans are non-refundable and if the auto renew feature is selected at the time of purchase you must turn it off by accessing your account, ahead of the current active plan's expiration.

NOTE: When using your own private data plan some features will be unavailable, such as the Data Plan page. For information about data usage, contact your cellular provider.

SWAPPING THE SIM

The Winegard Gateway comes ready for use out of the box, preinstalled with a unique Winegard FreedomGO AT&T SIM card that supports the fastest speeds available without the threat of throttling. Unlike some hotspot data plans, the Winegard FreedomGO plan allows you to decide what data plan is right for you for 30 days and will not charge overages or throttle your speeds at any point. If you happen to need more data, you can purchase additional plans at any time.

There is also a FreedomGO Verizon SIM card included in the box. To activate the Verizon Unlimited Data Plan* call 1-877-494-0659.


*Up to 300GB of data at either 25Mbps or 50Mbps then speeds reduced to 600kbps

WINEGARD FreedomGO AT&T T-Mobile verizon

At the time this manual was written, the Winegard Gateway has been fully certified for use with the Winegard FreedomGo Plans, AT&T®, Verizon® Wireless and T-Mobile®. Visit www.winegard.com/gateway to view up-to-date approved carriers.


Scan to learn more

Step 1 - Start with the Gateway power turned off. The Gateway will then need to be removed from its mounting location. See diagram to the right on how to pull down on the release lever and slide the Gateway before pulling down gently.

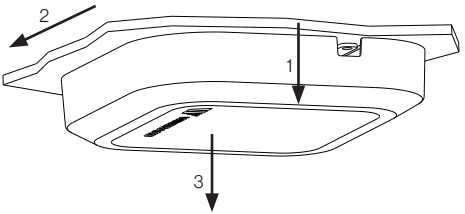

Step 2 - Locate the SIM card slot on the backside of the Gateway. A portion of the Winegard FreedomGo SIM card (SIM0) is exposed. It is not necessary to remove this SIM as Winegard Data is always available for purchase.

Step 3 - In the upper slot (SIM1) of the dual SIM Connector, insert the NEW carrier's SIM card with the metal electronic chip facing the electronics board and the angled corner in the correct position, as shown below. If the SIM is inserted incorrectly the SIM will not be recognized and an error code will be displayed on the Status page.

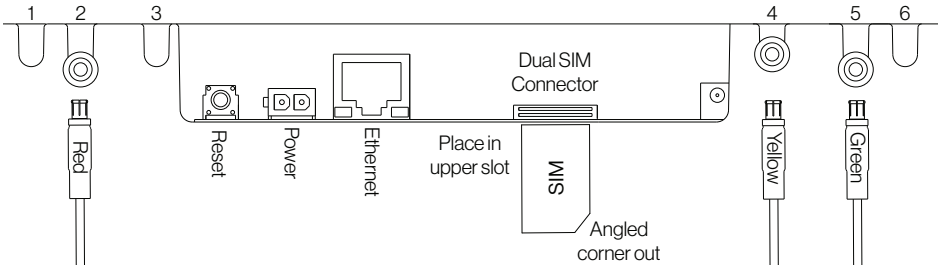

Step 4 - Turn the Gateway power switch on.

CELLULAR SETTINGS

If swapping the SIM card, you may need to configure the cellular settings. Follow steps 1-3 on page 8 to access the Winegard control panel.

Step 1 - From the control panel select Settings from the cellular field.


Step 2 - Select the appropriate SIM slot option using the drop-down menu.


Step 3 - Verify the correct cellular provider is listed in the Provider field. The APN will default to the APN for the set provider.

Step 4 - Once the proper cellular settings are selected select Save Changes.

Step 5 - Once the settings are saved you can connect to cellular by following step 7 on page 9.

NOTE: You CANNOT change cellular settings when cellular is the selected internet access option.

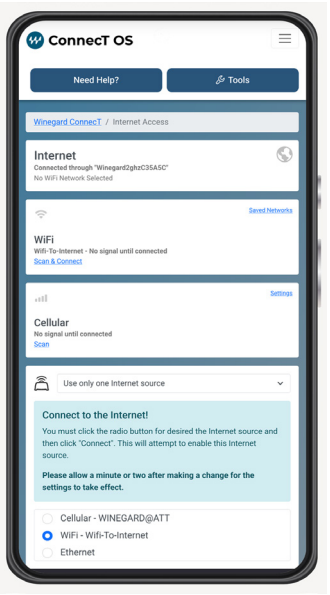


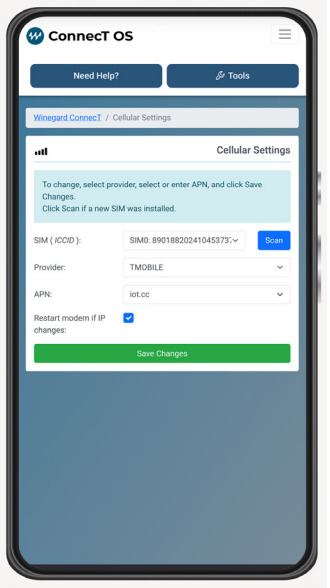

WEB OPERATION (CONTINUED)

WiFi - Saved Networks

Within the Saved Networks page, you can manage your preferences to what WiFi networks your system will connect to. The system can remember if you frequently visit and use a location's WiFi, therefore not requiring you to enter the password to connect.

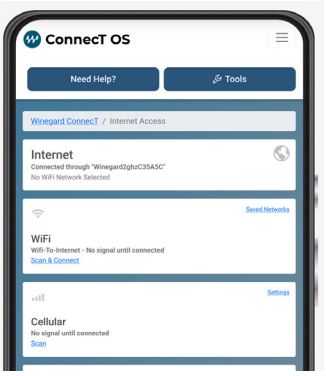

Cellular - Scan

Search for available cellular towers. Not available when Cellular is the selected Internet source.

Navigation Menu

More advanced features and information can be found on pages located in the menu. To access the menu, click the menu icon(three dashes) in the upper right corner of the screen.



My Network

Note: Any changes made to your network settings will result in a temporary loss of all network connections. You will need to reconnect all devices to the Winegard network with the new network name and/or password.

Change WiFi Name (SSID)


It is recommended that you change your Winegard SSID. This will improve the security of your network and make it easier to find with your WiFi-enabled devices.

Change Network Password

To secure your network, it is suggested that you change the network password to something you can remember. The new password must be at least eight characters long.

Security Type

The Winegard Router Security Type has been defaulted to WPA2-PSK (SHA256). Other security options are available on this page.

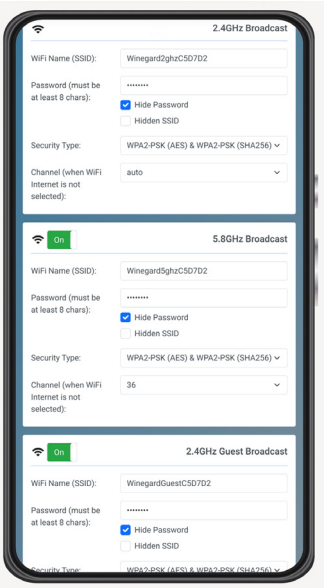

5 GHz Network (Pro model only)


For faster device performance enable the 5GHz network. Once enabled connect your WiFi enabled devices to the SSID shown.

Guest Network

Guest networks do not have access to the Control Panel. To set up a Guest Network click the ON/OFF toggle, give the Guest Network SSID an easily recognizable name, and enter a password that can be remembered by your guest. If you use a simple password, it is recommended that the guest network be disabled when not in use.

WEB OPERATION (CONTINUED)

Advanced

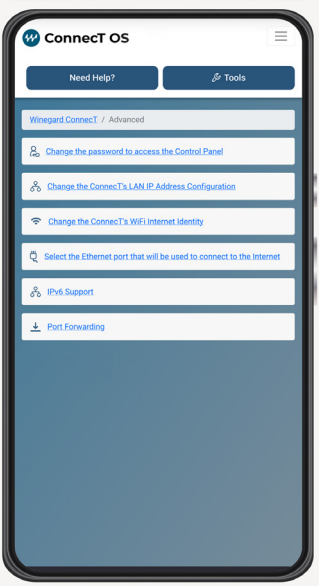

Change Control Panel Password

It is not necessary to change the administration password, however, to change the password, enter the new password into the area for both PASSWORD and CONFIRM PASSWORD. Select SAVE LOGIN CREDENTIALS.

LAN IP Address Configuration

WARNING: Do not change the network address unless instructed by Winegard Customer Support. Doing so may cause your system to not function properly.

WiFi Internet Identifier

Here you can change the wireless MAC Address of the Winegard system.

WAN Ethernet Identifier

Here you can change the WAN Ethernet MAC Address of the Winegard system.

Ethernet Port Assignment

Set the Ethernet port on single port systems to either LAN or WAN.

IPv6 Support


Enable or Disable support for IPv6 IP addresses. IPv6 is only functional on Cellular connections.

Port Forwarding

Create rules for port forwarding.

Network Activity


Within the **Network Activity** page, you can see what devices are currently connected to your Winegard system as well as the network you are connected to. You can also see the network traffic activity and data consumption.

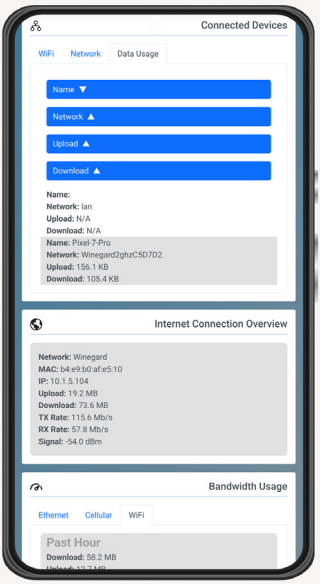

WEB OPERATION (CONTINUED)

Cloud Services (GPS-enabled models only)


Within the **Cloud Services** page, you can see the latitude and longitude of your Winegard device. Here you must turn ON GPS Location Service which will allow you to Find My RV* when using the Winegard RV Halo app. When using the app, you must sign in and register your Winegard device in order to access Find My RV*. *Find My RV features require RV Halo app membership

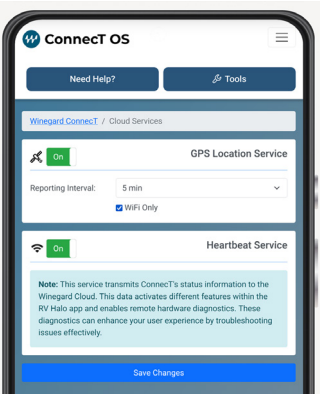

System

Manage Software


When first setting up the Winegard it is recommended to check for software updates once the system is connected to an internet source. It is also recommended to check for updates every couple months for fixes and added features. In the Manage Software section, you can check for the latest software version or check for a modem update.

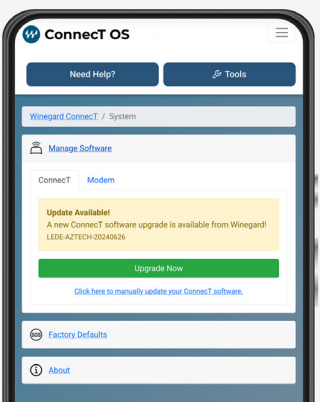

Reset To Factory Defaults

You can return the system to factory defaults either by clicking the Reset to Factory Defaults button on the System page, or by holding the reset button for at least 20 seconds but no more than 30 seconds. See page 5 for the reset button location.

WARNING: All changes will be lost and the unit will return to the factory default SSID and password.

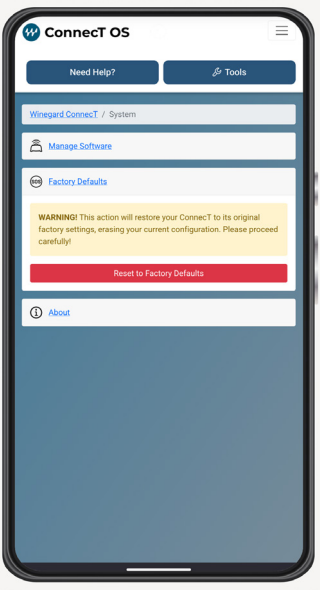

About

The About section has information about your Winegard product, such as current software version, Cellular Carrier, IMEI Number, SIM Card Number, and much more.


Bluetooth

The Winegard Router is compatible with the Winegard RV Smart Sensors. Monitor your RV when you're with the RV or even remotely. See Page 26 for more information about the RV Halo Smart Sensors. Most of the sensor features and controls must be done through the RV Halo app.

WEB OPERATION (CONTINUED)


Need Help?

Within the **Need Help** page you will find getting started guides, contact information for Winegard Customer Support, and the remote assistance toggle.

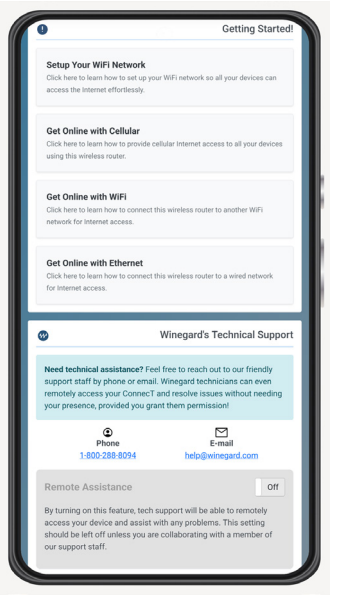


Tools

Access tools to save a log file, test internet connectivity, test download speeds, and reboot the device.

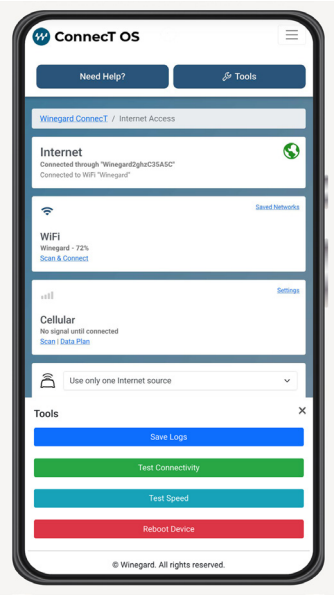

MULTI-WAN SETUP


The Winegard Connect software is capable of Automatic Failover and Load Balancing. To use two or more internet sources, you will need to select which option under the drop-down menu is right for your setup.

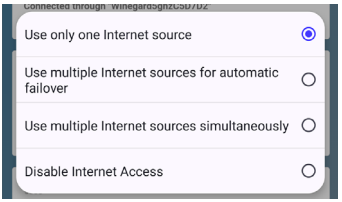


❑ Internet Failover

You must click the radio button for the desired Internet source and then click “Connect and add to failover”. This will attempt to enable this Internet source.

You will need to configure the list of available sources with the highest priority to your lowest. This determines the order in which your internet connections will be used. Use the arrows to reorder the Internet sources.

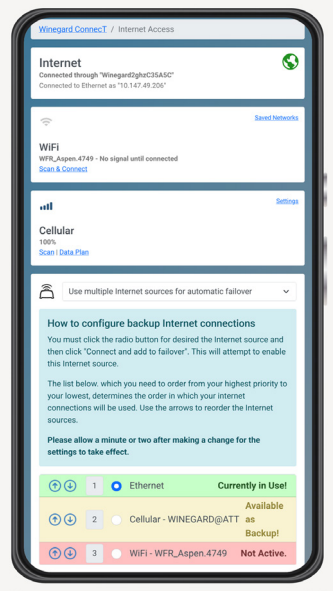

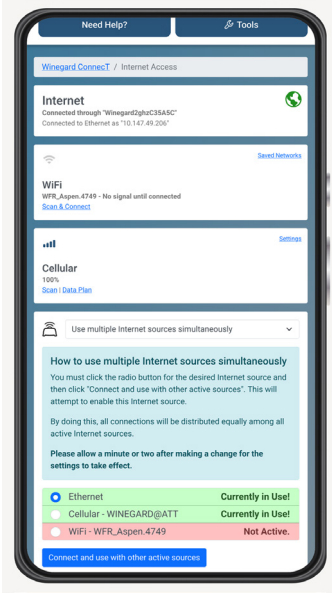


❑ Load Balancing

To use multiple sources simultaneously you must click the radio button for the desired Internet source and then click “Connect and use with other active sources”. This will attempt to enable this Internet source.

By doing this, all connections will be distributed equally among all active Internet sources.

STARLINK INTEGRATION

The Winegard Gateway will integrate with the Starlink Antennas. Follow the installation instructions/diagram to correctly connect the two units together.

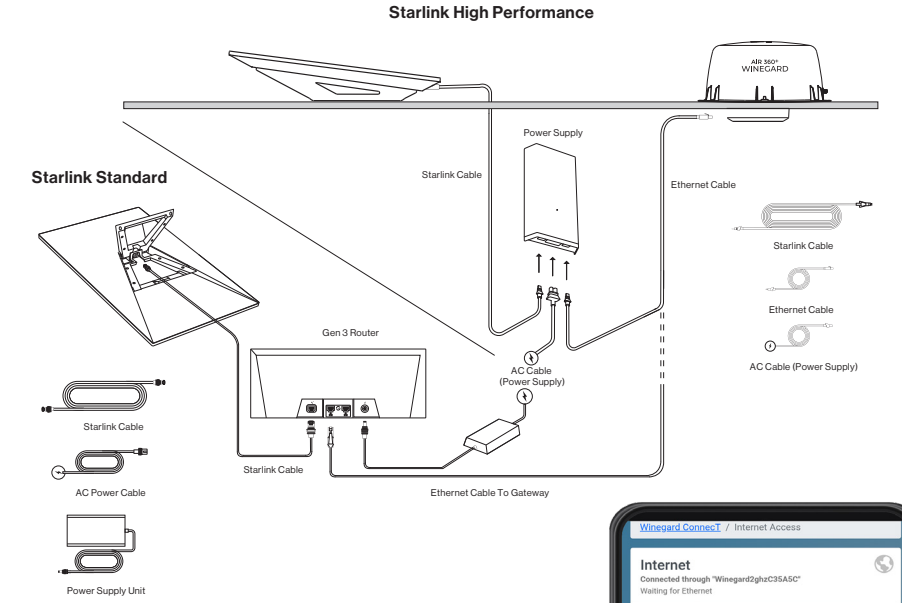

Starlink High Performance Install


1. Ensure the power to the Gateway is turned off. Then, connect the Starlink Cable into the power inserter.
2. Plug the AC Cable into power.
3. Run the Starlink provided Ethernet cable from the power inserter to the end of the Ethernet from the Gateway.


Starlink Standard Install

1. Ensure the power to the Gateway is turned off. Then, connect the Starlink Cable into the Gen 3 router.
2. Plug the Power Supply unit into the Gen 3 router, and plug the AC Cable into power.
3. Run an ethernet cable from the Gen 3 router to the WAN port on the Gateway.

Starlink Operation

1. Turn the power to the Gateway On.
2. Next, from the Status page, select the Ethernet option under CONNECT TO THE INTERNET!
3. Once the INTERNET STATUS displays "Connected to STARLINK...." you are now ready to use the WiFi!

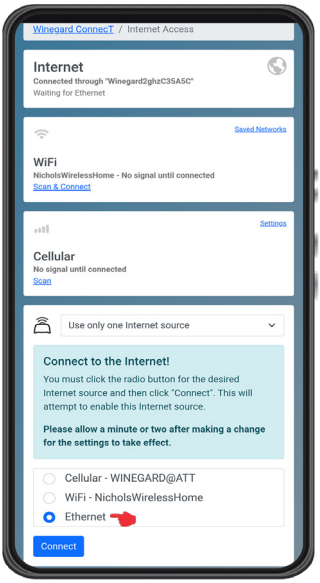

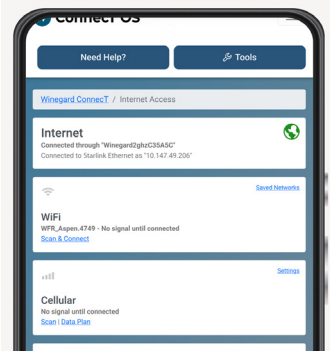

CREATING A RV HALO ACCOUNT


To set up your Winegard, download the RV Halo app from the Google Play store or the Apple App Store. Follow these instructions to set up an account to get online!




1. Open the RV Halo App. **Do not connect to the Winegard Router.**



2. Tap the **Create Account** button to sign up for an account. You then can sign up with email, Facebook, Google, or Apple.

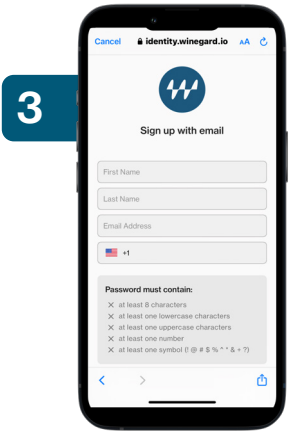


3. If signing up with email, fill in the necessary information and tap the **Register** button.

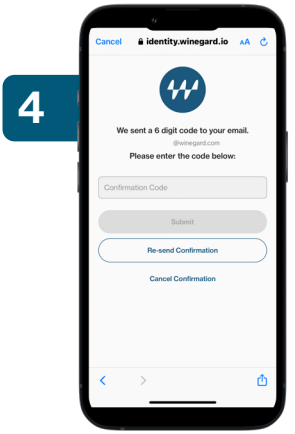


4. A 6-digit code will be sent to this email address. Navigate to your email inbox, find the confirmation code and enter it. Tap the **Submit** button.


CREATING A RV HALO ACCOUNT (CONTINUED)

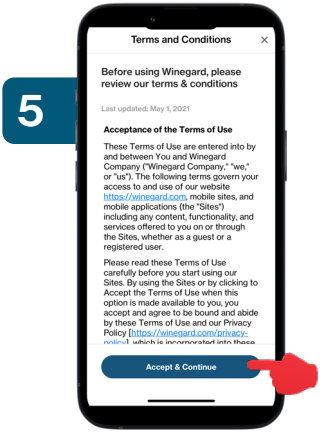


5. Read the Terms and Conditions page. Then, tap the **Accept & Continue** button.

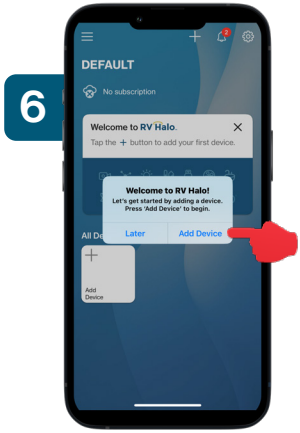

6. Tap the **Add Device** button.

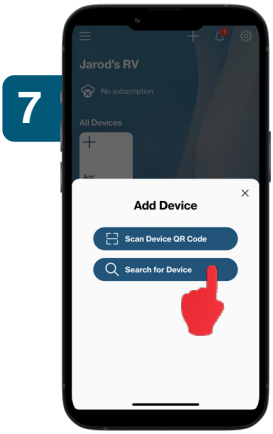


7. Tap the **Search for Device** button.

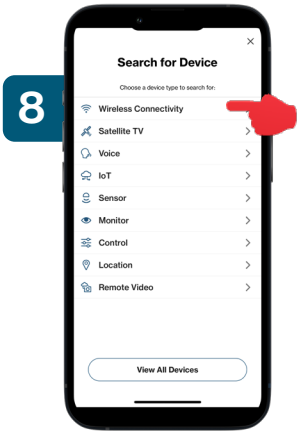


8. Choose the **Wireless Connectivity** option and tap the Add+ button for the correct Winegard router.

CREATING A RV HALO ACCOUNT (CONTINUED)

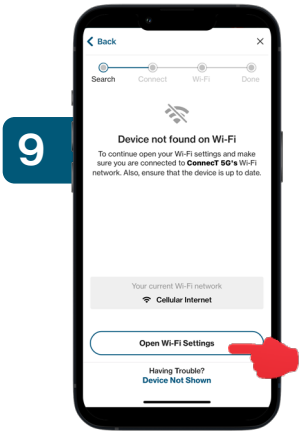


9. The app will search for the correct device but since you haven't connected to the Winegard router there will be a "Device Not Found" message. Tap the **Open Wi-Fi Settings** button and select the correct Winegard network.

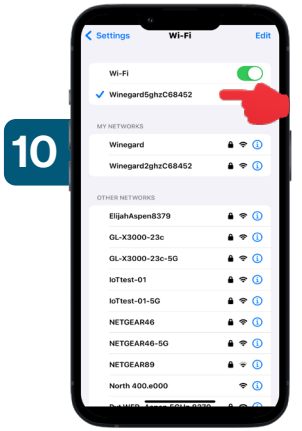

10. Find and select the correct Winegard network. Switch back to the RV Halo app and the search will start again.




11. An internet connection is required to proceed. If your Winegard device does not currently have an internet connection, you will need to either connect to a different WiFi network, or switch to mobile data. Tap the **Open WiFi Settings.**

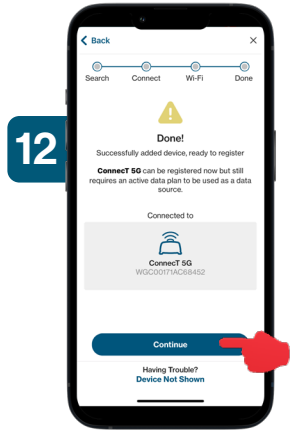


12. Return to the RV Halo app.

You've successfully added the device. Tap the **Continue** button to continue registering.


CREATING A RV HALO ACCOUNT (CONTINUED)

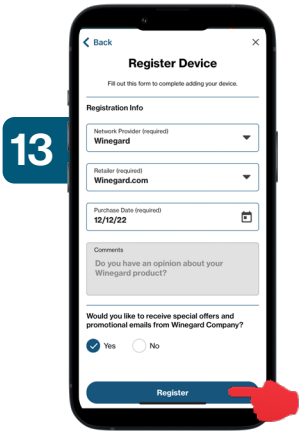

13. Register the device by filling in the Registration Info and tapping the **Register** button.

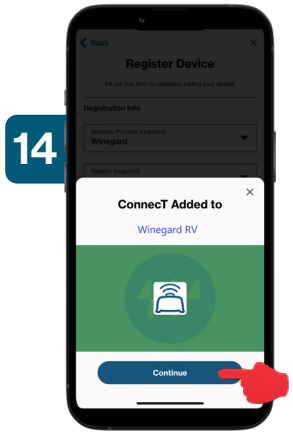


14. Your device has now been registered. Tap the **Continue** button.

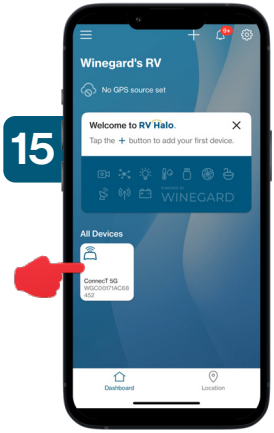


15. Tap your Device under All Devices. Now, reconnect your device to the Winegard network shown in step 10.


CONNECTING A WIFI NETWORK

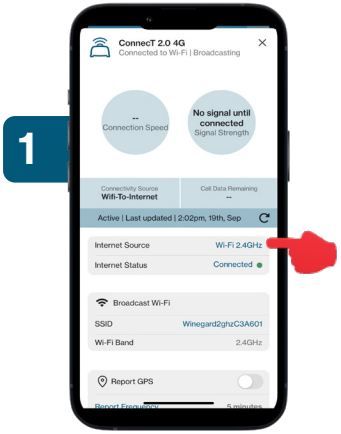

1. Tap the Internet Source.

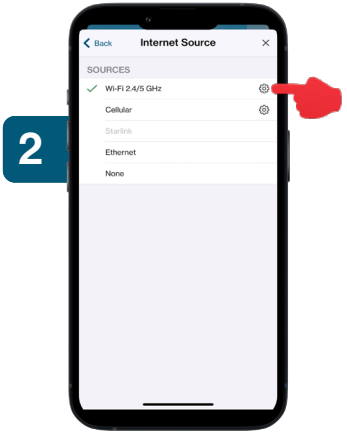

2. Tap the settings wheel next to Wi-Fi 2.4/5 GHz.

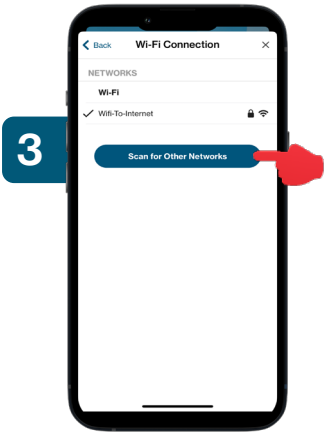


3. Tap the Scan for Other Networks button.




4. This will start a search for available WiFi Networks.


CONNECTING A WIFI NETWORK (CONTINUED)

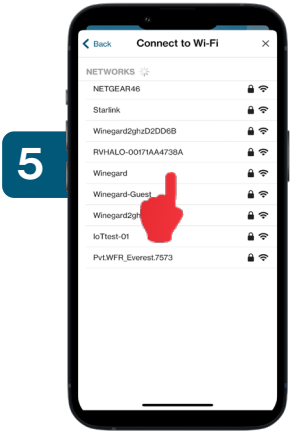


5. Choose the WiFi source you wish to connect to.

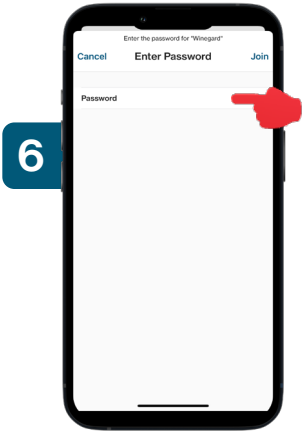

6. Enter the correct password for this network and Tap the Join button.

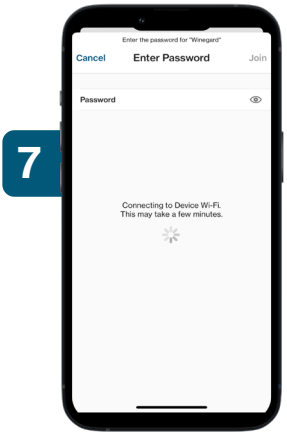


7. This may take a couple of minutes to connect to the network.

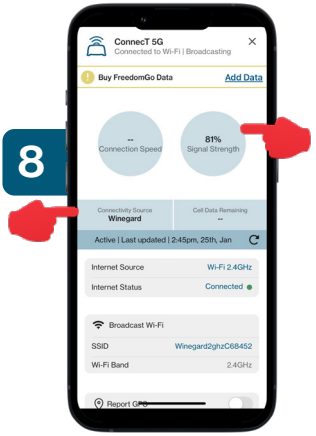


8. Once the Signal Strength and Connectivity Source are filled in you are connected to the internet!

BUYING DATA

Winegard cellular devices have a FreedomGO Powered by either AT&T or T-Mobile SIM card installed, or both. Follow these steps to purchase the plan that matches your SIM and best fits your need.

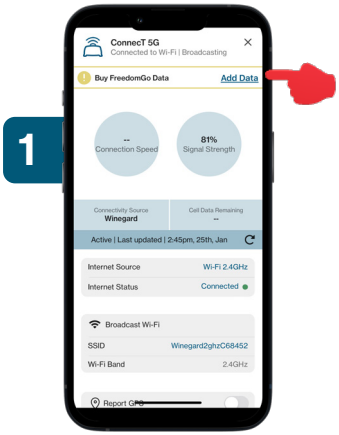

1. Click on the Add Data link.

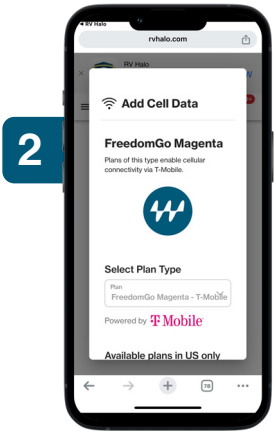

2. Choose the correct plan and fill out the necessary payment information.

US ONLY

Get 10GB for
$59/30 days

Get 25GB for
$99/30 days

Get 100GB for
$149/30 days

FreedomGo powered by
T-Mobile Pay As You Go Plans

US ONLY

Get 10GB for
$59/30 days

Get 20GB for
$99/30 days

US & CANADA

Get 1GB for
$20/30 days


Get 3GB for
$35/30 days

Get 10GB for
$80/30 days


Get 20GB for
$150/30 days

FreedomGo powered by
AT&T Pay As You Go Plans


BUYING DATA (CONTINUED)

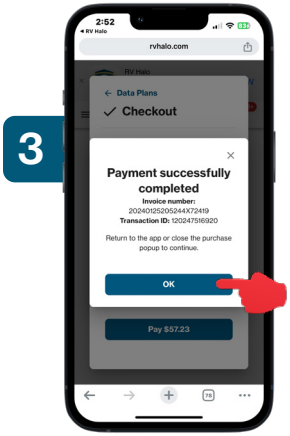

3. A payment notification and email will immediately be issued after purchase. Select the OK button to return to the device home page.

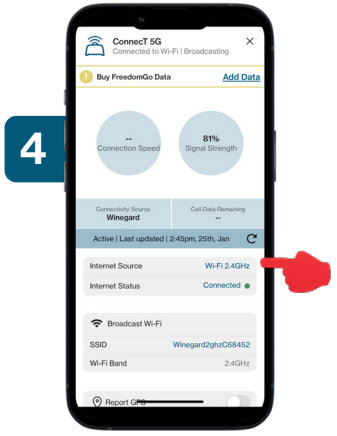

4. Choose the Internet Source option and select Cellular as the source.

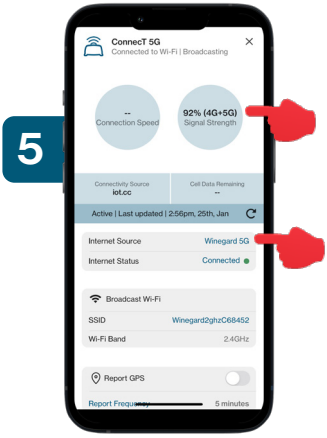

5. Once the Signal Strength and Connectivity Source are filled in you are connected to the internet!

NOTE: Once you have a Winegard account for your system you may purchase data any time by signing into your account at rvhalo.com or using the RV Halo app. This can be done away from your RV.

NOTE: All data plans are non-refundable and if the auto renew feature is selected at the time of purchase you must turn it off by accessing your account, ahead of the current active plan's expiration.

The Winegard Gateway is compatible with the Winegard RV Halo Smart Sensors. Monitor your RV when you're with the RV or even remotely. Scan the QR code to learn more!



CONTACT CLOSURE

Get alerted when windows or doors are opened or closed.



WATER DETECTION

Get alerted when water is present any area you install the sensor.



MOTION (PIR)

Get alerted when motion is detected in your RV.



TEMP AND HUMIDITY

Great for monitoring pets, refrigerators, freezers or just the RV temperature. Notifications are sent when the temperature or humidity levels get outside a preset range.

NOTE: Remote notifications and other GPS features require a RV Halo Pro Membership:

- Remote Diagnostics
- GPS Services
- Asset Tracking/Geofencing
- Find My RV
- Share My Location
- Weather at My RV
- Travel History & Route Guidance

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and devices.
- Connect the equipment into an electrical outlet on a circuit different from that which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Only channels 1–11 can be operated. Selection of other channels is not possible.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 25 cm between the radiator and your body.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.

This device complies with FCC and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme à FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.


WINEGARD®
™