Winegard Connect 5G with RV Halo (WF2-5G1/WF2-5G6)
INSTALLATION & OPERATION MANUAL

5G CELLULAR DUAL BAND ROUTER, WIFI EXTENDER, AND OMNIDIRECTIONAL HDTV ANTENNA



PROTECTED BY WINEGARD 2 YEAR LIMITED WARRANTY

DESIGNED AND MANUFACTURED IN USA SINCE 1953

WINEGARD - **RV HALO** APP

DOWNLOAD **FREE**

Download on the App Store

GET IT ON Google Play

Place label here

SCAN FOR

MORE PRODUCT INFORMATION

SUPPORT

WARRANTY

Winegard Company 2736 Mt. Pleasant St. | Burlington, IA 52601

AT&T and the Globe Logo are owned by AT&T Intellectual Property. Verizon Wireless is a trademark of Verizon Trademark Services, LLC. T-Mobile, the magenta color, and the digits design are registered and/or unregistered trademarks of Deutsche Telekom AG. All trademarks, registered trademarks and logos are the property of their respective owners and are not affiliated with Winegard Company.

WINEGARD®

Printed in U.S.A. © 2025 Winegard Company
Rev16-25 2452549

Congratulations on your Winegard® ConnecT 2.0 5G purchase!

Thank you for trusting Winegard to bring connectivity solutions to you while on the go. This product will provide you more freedom when choosing where to adventure, all while bringing the comforts of television and the internet securely to you and your devices.

CONTENTS

Parts List 2
Warnings 2
Specifications 3
LED Definitions 3
Installation Diagram 4
Exterior Installation 5
Power Switch Installation 6
TV Antenna PS Installation 7
Web Operation 8
Swapping the SIM 10
Cellular Settings 11
Network Settings 12
Advanced Settings 13
Reset Device 14
Multi-Wan Setup 16
Starlink Integration 17
TV Antenna Operation 18
RV Halo App Setup 19
Buying Data 25
RV Halo Smart Sensors 27
FCC Statement 28

PARTS LIST

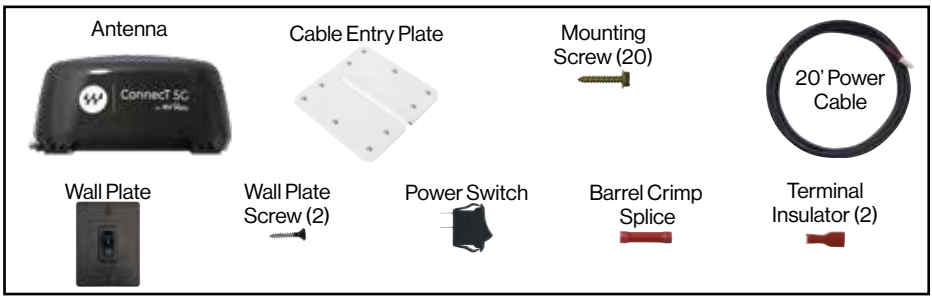

WARNINGS

- Read this manual carefully and completely before attempting operate this product.
- DO NOT LOSE THIS MANUAL. It contains your unique factory default SSID and password.
- Do not paint any portion of the Winegard Connect. Painting the system could damage the system and will void the warranty.
- For security reasons, it is recommended to change the factory d efault network names(Winegard2ghXXXXXX and Winegard5ghzXXXXXX) along with the defaultpassword. A unique SSID helps you recognize your network from others, especially in areas with multiple networks.
- When first setting up the Winegard Connect 5G, it is recommended to check for software updates once the system is connected to an Internet source. It is also recommended to check for updates every couple months for fixes and added features.
- Service will not work in Mexico. Some Winegard FreedomGO Data Plans work in the US Only and some work in US and Canada. Verify the correct plan before purchasing.
- At the time this manual is written, the Connect 5G will work with the Winegard Data Plan, AT&T®, T-Mobile®, and Verizon®.

Disclaimer: Although every effort has been made to ensure that the information in this manual is correct and complete, no company shall be held liable for any errors or omissions in this manual. Changes and technological advances are continuously being made in the wireless market. Information provided in this manual was accurate at time of printing. If the Connect 5G antenna does not function as expected, please contact Winegard Company at 1-800-288-8094, email help@winegard.com.

SPECIFICATIONS

Wireless Standard: 802.11ac

Frequency Band: LTE: B1/B2/B3/B4/B5/B7/B8/B12(B17)/B13/B14/B18/B19/B20/ B25/B26/B28/ B29/B30/B32/B66/B71

5G: n8/n12/n20/n25/n28/n38/n40/n41/n48/n66/n71/n77/n78/n79

Wireless Speed: 2.4 GHz: 300Mbp*

5 GHz: 866 Mbps*

* Theoretical Maximums

Max Speed: 4G LTE - 2 Gbps download*

5G - 5 Gbps download*

Wireless Security: WPA-PSK, WPA2-PSK, Mixed

Antennas:

WiFi: (2)

5G: (4)

GPS: (1)

WiFi Range: Up to 3/4 miles

SIM Card Port: Mini SIM (2FF) - (25mm x 15mm x 0.76mm)

Compatible Carriers: Winegard FreedomGO, Verizon, AT&T, T-Mobile

For complete list of compatible carriers: www.winegard.com/connect

Power Rating: DC 9-16V, 1A

Operating Temperature Range: -30°C to +70°C (-22°F to +158°F)

Weight: < 4 lbs.

Dimensions: 16" diameter, 8" height

Warranty & Support:

Warranty: 2 Years Parts, 1 Year Labor

Support: Complimentary Telephone and Email Support

Online Technical Manuals and Instructions

Large Dealer Support Network

Setup Requirements: Minimum Wireless 802.11 b/g/n 2.4 GHz network; computer, tablet, or smartphone with a web browser; Winegard RV Halo app (optional)

LED DEFINITIONS

LED DEFINITION - LOCATED AT THE BASE OF THE CONNECT 5G	
LED OFF	System is powered down.
SOLID RED	System is booting up.
FAST BLINKING GREEN	System is initializing.
FAST BLINKING YELLOWISH-GREEN	System is up and waiting for an Internet connection.
SOLID GREEN	System is connected to the Internet.
ALTERNATING GREEN/ORANGE	System is being updated with new software.

INSTALLATION DIAGRAM

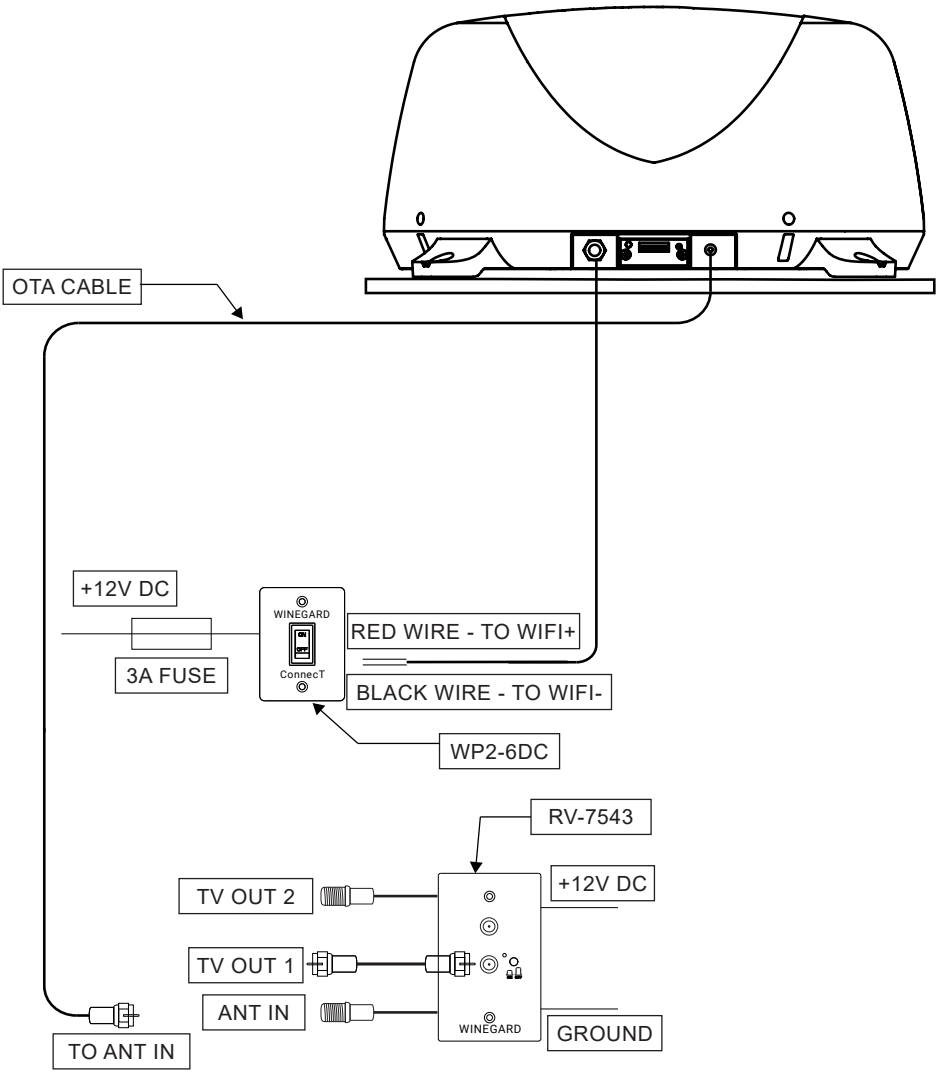

TOOLS NEEDED

- Drill with 3/4" bit
- 1-1/4" hole saw (if mounting switch in wall)
- #2 Phillips screwdriver
- Sealant (consult RV manufacturer for proper type for your roof material)
- Crimping tool
- Wire Stripper
- Pen or Pencil
- Power wire 18 gauge, 50' maximum recommended

EXTERIOR INSTALLATION

1. Do not mount closer than 12 inches from the edge of the roof or any adjacent devices. The ConnecT 5G will perform better with a clear line of sight.
2. Select a level spot on your roof for installation. Level the base front-to-back and side-to-side.
3. After selecting a location for the antenna, make sure that the centerline of the antenna is on or parallel to the centerline of the vehicle; the centerline of the antenna runs through the point between the two feet where cable connections are located.
4. Position the antenna with cables exiting toward the rear of the vehicle. To ensure proper installation, verify that the distance from the edge of the roof to any foot is at least twelve inches.
5. Place the unit on the roof in its permanent location, and mark around each base foot.
6. Clean the roof area where the base feet will attach to the roof; do not erase your marks.
7. Check with your vehicle manufacturer for approved sealant and apply approved sealant in the areas marked for the base feet. Place the base feet on top of the sealant.
8. Before using the supplied mounting screws, check with your vehicle manufacturer for any special screw requirements. Screw down each foot and put sealant around the edge of feet and over each screw.
9. Decide the best location for the power, coax, and Ethernet cables to enter the vehicle, as well as the location of the power switch inside your vehicle. Drill a 1" hole in the roof, and push the power cable inside, making sure the cable is accessible from the area where the power switch and TV wall plate will be located. The Ethernet cable can eb routed where you plan to use the LAN/WAN connection.
10. Place the provided cable entry plate over the hole and cables. Screw the plate in place. Seal the plate and screw holes with approved sealant (not included).
11. Before moving on to installing the power switch, verify whether you need the additional 20-foot power cable (supplied). If you do not, you are able to cut off the connector from the end of the 10-foot power wire and strip the ground and power wires with a wire stripper (not provided). If you do need more length, connect the connector of the 10-foot power cable with the mating connector of the 20-foot extension.

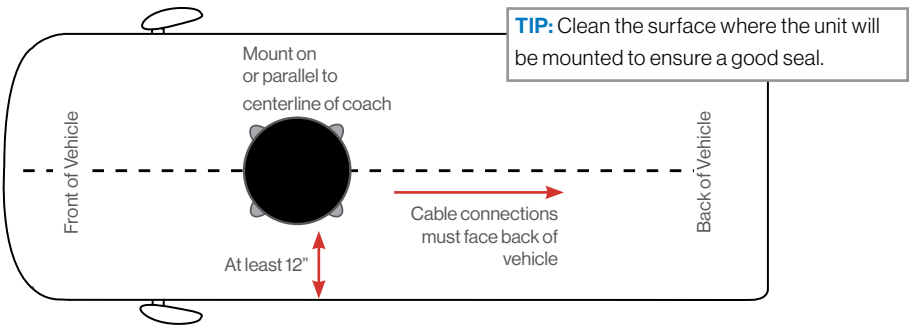

POWER SWITCH INSTALLATION

1. Choose a location to install the supplied Wall Plate with Power On/ Off switch. You will need to install your own power wire from your RV. It is recommended to use 18-guage wire, no longer than 50 feet with a dedicated 12VDC circuit and a 3A fuse.
2. Drill or use a hole saw to create a 1¼" hole. Pull the power cable from the Connect 5G and the RV's power wires through the wall or panel.
3. Be sure the switch is in the OFF position before continuing. Slide the power switch into the wall plate.
4. Connect the +12V power wire from the vehicle to a small red terminal insulator. Crimp the connector. Connect this small red terminal insulator to the isolated spade of the power switch.
5. Connect the red wire from the Connect 5G to another small red terminal insulator. Crimp the connector. Connect this small red terminal insulator to the other spade on the switch.
6. Slide the ground wire from the vehicle into one end of a barrel crimp splice, and slide the black ground wire from the antenna into the opposite end of the splice. Crimp the splice.
7. Slide the power switch back into the hole created in step 2. Mount the wall plate with the two supplied screws.

12V Wiring Requirements
- Supply voltage – 9-16V
- Max. operating current – 1A
- Max. operating temperature – 60C
- Max. power cable length – 18 gauge (recommended) – 50 ft.
- 3A Fuse



TV ANTENNA POWER SUPPLY INSTALLATION

WARNING: The power supply should be turned off when connecting cables.

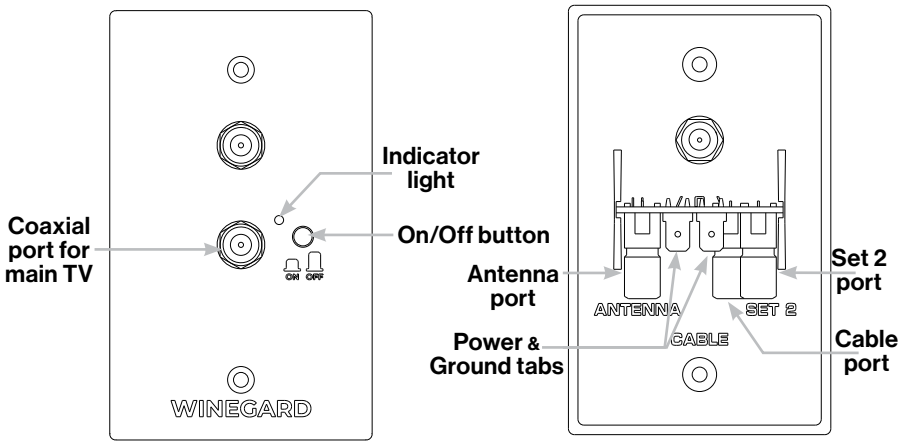

1. The power supply may be flush mounted in most standard electrical boxes. To flush mount, cut a hole in the wall to fit the box. Run two #12 wires between the wall plate and +12 VDC source, and route downlead cable to this location.

2. Make a 12 volt connection to the power supply. Install the supplied terminals on wires from +12 VDC source, and crimp the terminals with an appropriate crimping tool.

3. Push the wires onto tabs on the back of the power supply. (“PWR” and “GND” are also noted on the underside of the power supply electronics board.)

4. Connect the coax cable from the antenna to the “ANTENNA” port on the power supply, and tighten until fingertight. Then, tighten ¼ turn more.

5. If hooking up the antenna to two televisions, connect a coax cable from the “SET 2” port to the “Antenna In” port on the second television.

6. If hooking up a cable input, connect the cable input to the “CABLE” port on the power supply.

7. Mount the power supply in wall with the provided screws.

8. Connect a coax cable from the coax port on the front of the power supply to the “Antenna In” coax port on the main TV.

9. Press the “ON” switch on the front of the power supply, and check that the light is on.

This unit is equipped with a polyswitch, which will shut down +12 VDC if there is a direct short between the antenna and power supply. The indicator light will not light. Once the short is eliminated, the device will reset itself.

WEB OPERATION

Note: To access the Winegard Control Panel we recommend web browsers Microsoft Edge, Firefox, Safari, and Google Chrome.

Warning: For first time users - On the initial setup, your Winegard may have to reconfigure the modem. If this occurs, expect an additional 1-2 minutes of delay before the Winegard Router can be used. **DO NOT CLICK THE BACK BUTTON** on your web browser when navigating through this software.

Step 1 - Turn the Winegard power switch ON. Turn on the WiFi enabled device(s) that you want to connect and scan for wireless networks. It may take a few minutes for the Winegard network to appear.



Step 2 - The label located on the front of this manual lists the unique default SSID and password. Select this WiFi network from the list and enter the correct password.

Note: It is recommended to set your device(s) to automatically reconnect with the Winegard network.



Step 3 - Once connected, open your device's Internet browser and type 10.11.12.1 into the address bar and press Enter. This will take you to the Admin Login page. Login using the following:

USERNAME: admin
PASSWORD: admin

The Winegard Connect 5G can access the internet three ways: from a local WiFi network, a cellular network, or a wired WAN.

Step 4 - To connect to a **WiFi** network, select WiFi from the Internet Access options and then click on **Scan & Connect**. This will bring up a list of all WiFi signals in range (this will take around 30 seconds).



Note: For security reasons, it is recommended to change the factory default network names (Winegard2ghXXXXXX AND Wingard5ghzXXXXXX) along with the default password shown on page 11. A unique SSID helps you recognize your network from others, especially in areas with multiple networks.

WEB OPERATION (CONTINUED)

Step 5 - The list of available networks will be displayed by signal strength. Select the desired network (SSID) and click **CONNECT**.

Step 6 - Enter the network password, if prompted and click **Continue**. Once the Winegard connects to the internet the **INTERNET** field will show Connected (this could take up to two minutes). You are now ready to use the WiFi.

> **Note:** Some networks will display a "splash page" when connecting instead of using a network password. When connecting to a network requiring a splash page for multiple days, it may be necessary to clear your browser cache.



Step 7 - To connect to a Cellular network, select Cellular from the internet access options. Then click **Connect**. If you have available data to use, the INTERNET STATUS should display Connected to Cellular "Winegard ConnecT Data Plan". You are now ready to use the cellular connection. If you do not have any available data, the Internet Status field will display Denied Access. You will have to add data in order to use the cellular connection.



Step 8 - To add data, you must be connected to an internet source. If needed, connect to a WiFi source (steps 4-6). Once connected, from the Status page, select the DATA PLAN link. On the Data Plan page, you can see how much data you have remaining or click the link in the subscription field. Here you can sign in and view your account or set up a new account. When creating a new account enter the Account Registration form and select Save. Once this is complete you can choose the FreedomGO plan that is right for you.

> **WARNING:** Connecting to the Internet through cellular will consume data from your Winegard FreedomGO data plan.



NOTE: Once you have a Winegard account for your system you may purchase data any time by signing into your account at rvhalo.com or using the RV Halo app. This can be done away from your RV.

NOTE: All data plans are non-refundable and if the auto renew feature is selected at the time of purchase you must turn it off by accessing your account, ahead of the current active plan's expiration.

NOTE: When using your own private data plan some features will be unavailable, such as the Data Plan page. For information about data usage, contact your cellular provider.

SWAPPING THE SIM

The Winegard Connect 5Gcomes ready for use out of the box, preinstalled with a unique Winegard SIM card that supports the fastest speeds available without the threat of throttling. Unlike some other hotspot data plans, the Winegard plan allows you to decide what data plan is right for you in a given 30 days and will not charge overages or throttle your speeds at any point. If you happen to need more data in a given month you are able to purchase additional plans.

At the time this manual was written, the Winegard Connect 5G supports the Winegard Plan, AT&T, T-Mobile, and Verizon Wireless. Visit www.winegard.com to view currently approved carriers. Winegard has no control over hotspot data plans through your provider. Please check with your provider on data plans.

If you choose to use your own 5G plan, you will need your cellular provider to supply you with an approved SIM card (Mini-SIM/Standard SIM 25mm x 15mm x 0.76mm). **You may also need them to provide the correct APN (Access Point Name) for this SIM card. We have listed the correct APN in the Operation portion of this manual, but they are subject to change at the provider's discretion.** When you contact your cellular provider you may be required to provide them with some information:

- Type of connection – Data only
- Type of device – Mobile Hotspot
- IMEI Number – This number will be located on the front of this manual along with on the outside of the outdoor antenna.

Once you have the SIM card from your cellular provider, you are ready to swap out the Winegard SIM. In order to do this, follow these instructions:

Step 1 - Start with the Connect 5G powered off.

Step 2 - Remove the 2 Phillips head screws that attach to the SIM card cover plate.

Step 3 - Remove the SIM card cover plate.

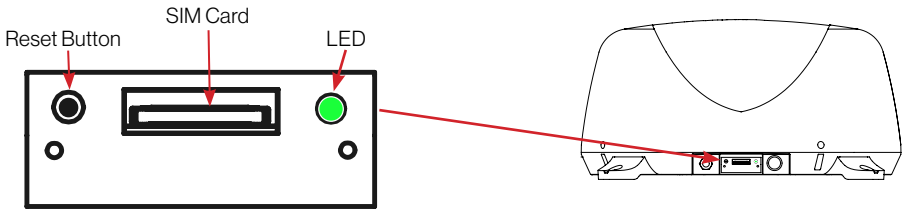

Step 4 - Next, push the currently installed SIM card inward (located in the middle of the housing, see above). You will hear a soft clicking sound. Release the SIM and it will eject outward enough for you to remove it.

Step 5 - Take your newly acquired SIM card and insert it into the empty SIM card holder, with the metal electronic chip facing downward, and the notched end going in first. You should hear another clicking sound once the card inserts into the correct position. If you do not hear a clicking sound, make sure that the SIM card is inserted correctly. If it is inserted backwards it will not insert completely and you will not hear a clicking sound.

NOTE: Do NOT force the SIM card into the SIM holder. The card must be properly positioned to function.

Step 6 - Replace the SIM card cover plate and 2 screws.

CELLULAR SETTINGS

If swapping the SIM card, you may need to configure the cellular settings. Follow steps 1-3 on page 8 to access the Winegard control panel.

Step 1 - From the control panel select Settings from the cellular field.

Step 2 - Select the appropriate SIM slot option using the drop-down menu.

Step 3 - Verify the correct cellular provider is listed in the Provider field. The APN will default to the APN for the set provider.

Step 4 - Once the proper cellular settings are selected select Save Changes.

Step 5 - Once the settings are saved you can connect to cellular by following step 7 on page 8.

NOTE: You CANNOT change cellular settings when cellular is the selected internet access option.





NETWORK SETTINGS

WiFi - Saved Networks

Within the Saved Networks page, you can manage your preferences to what WiFi networks your system will connect to. The system can remember if you frequently visit and use a location's WiFi, therefore not requiring you to enter the password to connect.

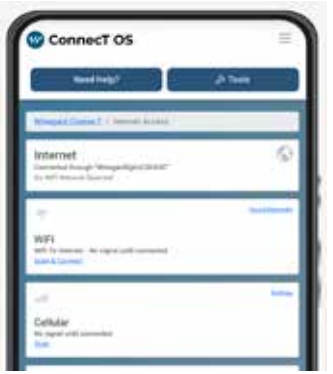

Cellular - Scan

Search for available cellular towers. Not available when Cellular is the selected Internet source.

Navigation Menu

More advanced features and information can be found on pages located in the menu. To access the menu click the menu icon(three dashes) in the upper right corner of the screen.



My Network

> **Note:** Any changes made to your network settings will result in a temporary loss of all network connections. You will need to reconnect all devices to the Winegard network with the new network name and/or password.

Change WiFi Name (SSID)

It is recommended that you change your Winegard SSID. This will improve the security of your network and make it easier to find with your WiFi enabled devices.

Change Network Password

To secure your network, it is suggested that you change the network password to something you can remember. The new password must be at least eight characters long.

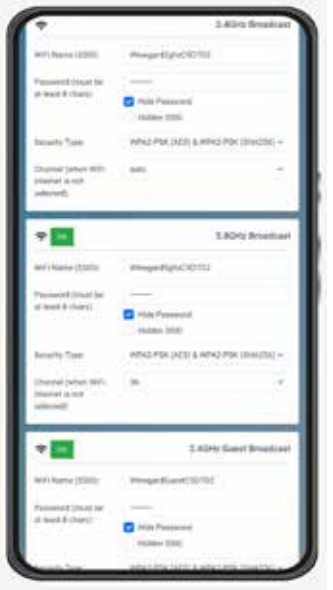

Security Type

The Winegard Router Security Type has been defaulted to WPA2-PSK (SHA256). Other security options are available on this page.

5 GHz Network

For faster device performance enable the 5GHz network. Once enabled connect your WiFi enabled devices to the SSID shown.

Guest Network

Guest networks do not have access to the Control Panel. To set up a Guest Network click the ON/OFF toggle, give the Guest Network SSID an easily recognizable name, and enter a password that can be remembered by your guest. If you use a simple password, it is recommended that the guest network be disabled when not in use.

ADVANCED SETTINGS

Advanced

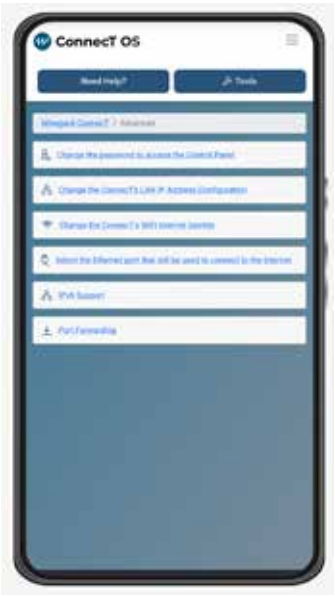

Change Control Panel Password

It is not necessary to change the administration password, however, to change the password, enter the new password into the area for both PASSWORD and CONFIRM PASSWORD. Select SAVE LOGIN CREDENTIALS.

LAN IP Address Configuration

WARNING: Do not change the network address unless instructed by Winegard Customer Support. Doing so may cause your system to not function properly.

Cellular Band Configuration

Change the current cellular band to All Bands, 4G LTE only, or 5G only.

WiFi Internet Identifier

Here you can change the wireless MAC Address of the Winegard system.

WAN Ethernet Identifier

Here you can change the WAN Ethernet MAC Address of the Winegard system.

Ethernet Port Assignment

Set which Ethernet port is the LAN or WAN port.

IPv6 Support

Enable or Disable support for IPv6 IP addresses. IPv6 is only functional on Cellular connections.

Port Forwarding

Create rules for port forwarding.



Network Activity

Within the **Network Activity** page, you can see what devices are currently connected to your Winegard system as well as the network you are connected to. You can also see the network traffic activity and data consumption.

CLOUD SERVICES & SYSTEM INFO

Cloud Services (GPS enabled models only)

Within the **Cloud Services** page, you can see the latitude and longitude of your Winegard device. Here you must Turn On GPS Location Service which will allow you to Find My RV* when using the Winegard RV Halo app. When using the app, you must sign in and register your Winegard device in order to access Find My RV*. *Find My RV features require RV Halo app membership



System

Manage Software

When first setting up the Winegard it is recommended to check for software updates the first time the system is connected to an Internet source. It is also recommended to check for updates every couple months for fixes and added features. In the Manage Software section, you can check for the latest software version or check for a modem update.

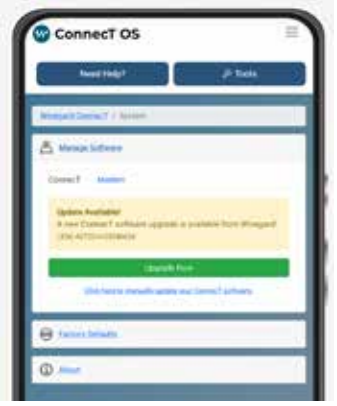

Reset To Factory Defaults

You can return the system to factory defaults either by clicking the Reset to Factory Defaults button on the System page, or by holding the reset button for at least 20 seconds but no more than 30 seconds. See page 9 for the reset button location.

> **WARNING:** All changes will be lost and the unit will return to the factory default SSID and password.

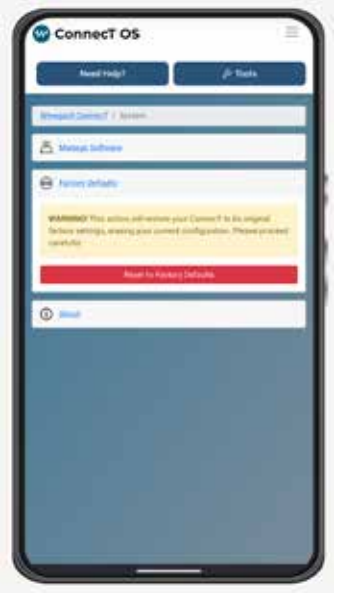

About

The About section has information about your Winegard product, such as current software version, Cellular Carrier, IMEI Number, SIM Card Number, and much more.

NEED HELP? & TOOLS

Need Help?

Within the **Need Help** page you will find getting started guides, contact information for Winegard Customer Support, and the remote assistance toggle.

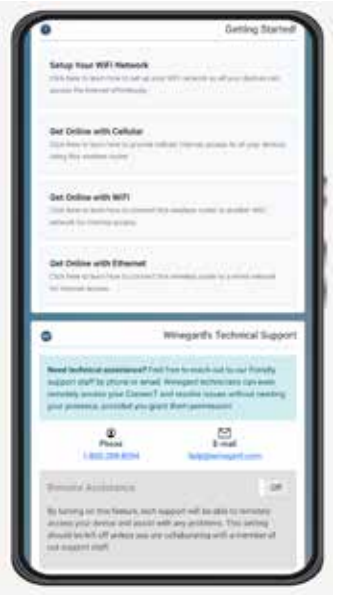

Tools

Access tools to save a log file, test internet connectivity, test download speeds, and reboot the device.



MULTI-WAN SETUP

The Winegard Connect software is capable of Automatic Failover and Load Balancing. To use two or more internet sources, you will need to select which option under the drop-down menu is right for your setup.



❑ Internet Failover

You must click the radio button for desired the Internet source and then click “Connect and add to failover”. This will attempt to enable this Internet source.

You will need to configure the list of available sources with the highest priority to your lowest. This determines the order in which your internet connections will be used. Use the arrows to reorder the Internet sources.

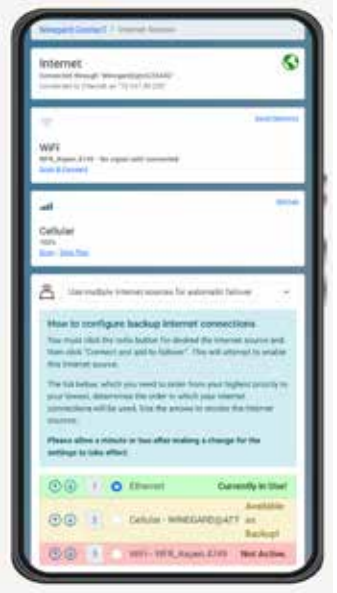

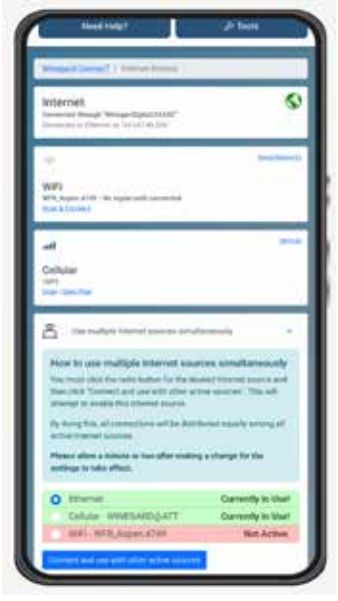

❑ Load Balancing

To use multiple sources simultaneously you must click the radio button for the desired Internet source and then click “Connect and use with other active sources”. This will attempt to enable this Internet source.

By doing this, all connections will be distributed equally among all active Internet sources.

STARLINK INTEGRATION

The Winegard Router will integrate with the Starlink Flat High-Performance unit. Follow the installation instructions/diagram to correctly connect the two units together.

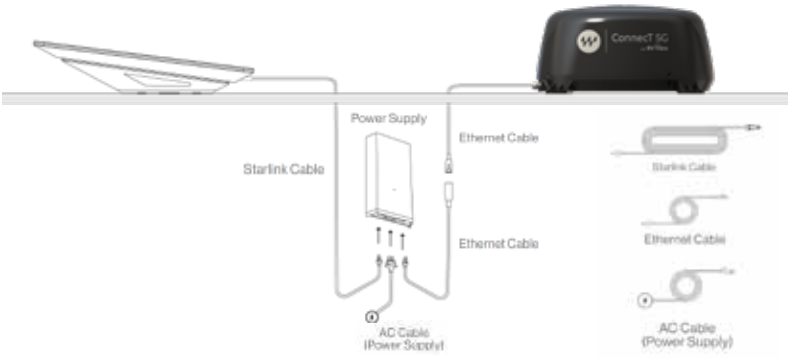

1. Ensure the power to the Connect 5G is turned off. Then, connect the Starlink Cable into the power inserter.
2. Plug the AC Cable into power.
3. Run the Starlink provided Ethernet cable from the power inserter to the end of the Ethernet from the Connect 5G.

➢ Starlink Operation

1. Turn the power to the Connect 5G On.
2. Next, from the Status page, select the Ethernet option under CONNECT TO THE INTERNET!
3. Once the INTERNET STATUS displays “Connected to STARLINK....” you are now ready to use the WiFi!

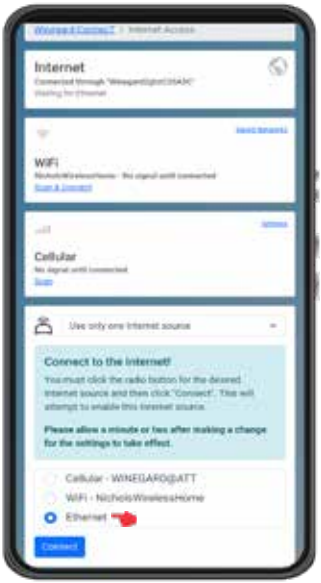



OVER THE AIR ANTENNA OPERATION

Running a Channel Scan

Confirm the antenna power button on the wall plate is powered on.

First time users must run a channel scan after installing the antenna to receive maximum programming.

A new scan will find any new channels that have been added in your area as well as finding any channels that have changed or moved.



While the steps to perform a channel scan may vary between televisions or compatible devices, below are some general guidelines to follow. For more specific instructions, refer to your device user manual for assistance.

NOTE: If you are not receiving all desired channels, check out dtv.gov/maps. On this site, you can enter the address of your current location and get a listing of likely channels available in your area.

General Instructions

1. Using the remote that came with the TV or compatible device, Select "Menu."
2. Select "Channel Setup."
3. Select "Antenna" or "Off-Air Mode" or "Auto-Scan."
4. Select "Channel Search" or "Channel Scan."

Run a channel scan anytime the antenna is moved or anytime a channel is lost. Once you have run a channel scan, you are ready to watch TV.

➢ **Tower Finder Utility**

To find available stations in your area, you can use the Tower Finder utility built in the RV Halo app.

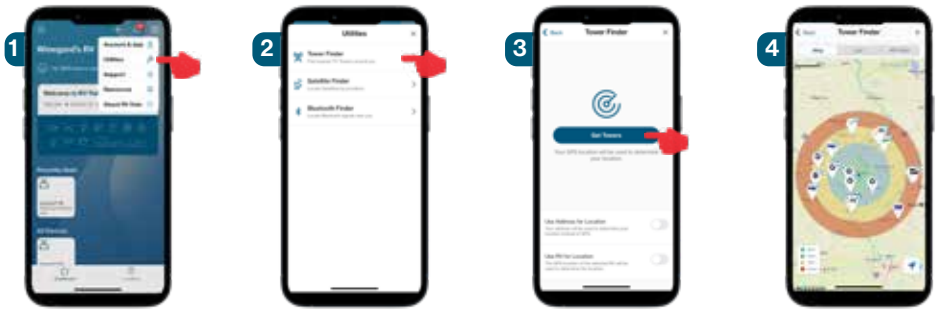

1. **iOS Users:** Tap the setting wheel on the upper right-hand corner of your RV Halo home screen. Next, Tap the Utilities option.

   Android Users: Tap the three dashes in the upper left corner of your RV Halo home screen. Next, Tap the Utilities Option
2. Tap the Tower Finder option from the list of Utilities.
3. Use either an exact address for location or the RV's location. Tap the Get Towers button.
4. You can see all the towers within 100 miles of the location scanned for. There is a Map view, a List view, and an AR view that will utilize your devices camera (if applicable) to aid in viewing where the TV station towers are located.

RV HALO APP SETUP

To set up your Winegard, download the RV Halo app from the Google Play store or the Apple App Store. Follow these instructions to set up an account to get online!



1. Open the RV Halo App. **Do not connect to the Winegard Router.**



2. Tap the **Create Account** button to sign up for an account. You then can sign up with email, Facebook, Google, or Apple.

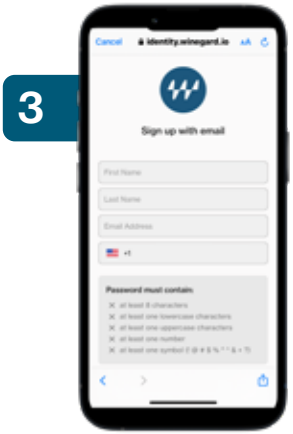

3. If signing up with email, fill in the necessary information and tap the **Register** button.



4. A 6-digit code will be sent to this email address. Navigate to your email inbox, find the confirmation code and enter it. Tap the **Submit** button.

RV HALO APP SETUP (CONTINUED)

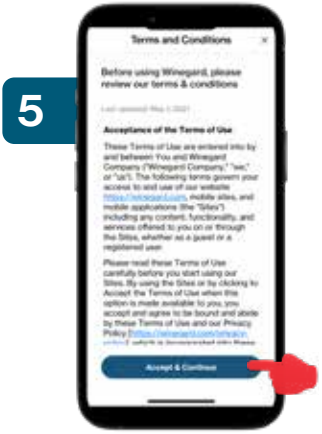

5. Read the Term and Conditions page. Then, tap the **Accept & Continue** button.



6. Tap the **Add Device** button.

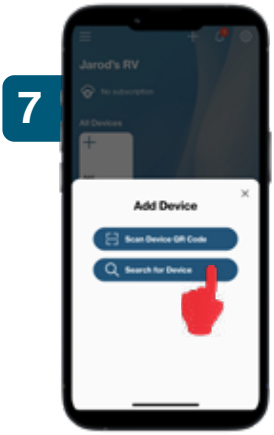

7. Tap the **Search for Device** button.

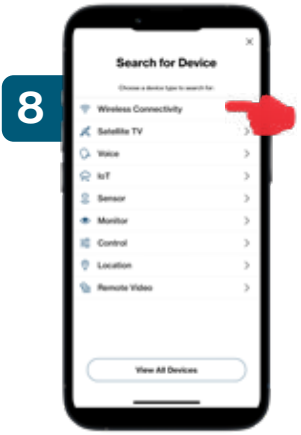

8. Choose the **Wireless Connectivity** option and tap the Add+ button for the correct Winegard router.

RV HALO APP SETUP (CONTINUED)



9. The app will search for the correct device but since you haven't connected to the Winegard router there will be a "Device Not Found" message. Tap the **Open Wi-Fi Settings** button and select the correct Winegard network.



10. Find and select the correct Winegard network. Switch back to the RV Halo app and the search will start again.



11. An internet connection is required to proceed. If your Winegard device does not currently have an internet connection, you will need to either connect to a different WiFi network, or switch to mobile data. Tap the **Open WiFi Settings.**

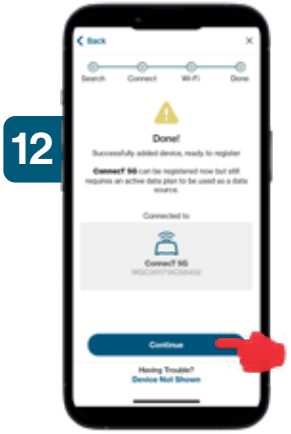

12. Return to the RV Halo app. You've successfully added the device. Tap the **Continue** button to continue registering.

RV HALO APP SETUP (CONTINUED)



13. Register the device by filling in the Registration Info and tapping the **Register** button.



14. Your device has now been registered. Tap the **Continue** button.



15. Tap your Device under All Devices. Now, reconnect your device to the Winegard network shown in step 10.

CONNECTING A WIFI NETWORK

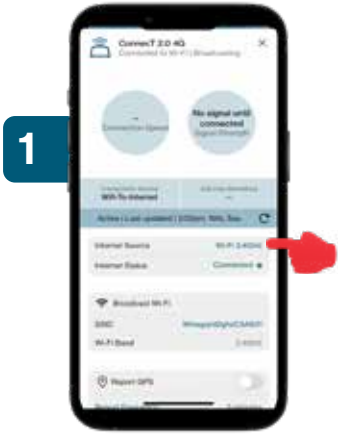

1. Tap the Internet Source.

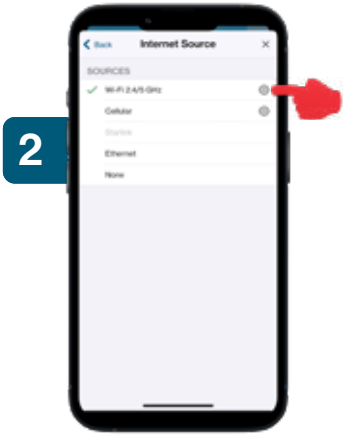

2. Tap the settings wheel next to Wi-Fi 2.4/5 GHz.



3. Tap the Scan for Other Networks button.



4. This will start a search for available WiFi Networks.

CONNECTING A WIFI NETWORK (CONTINUED)

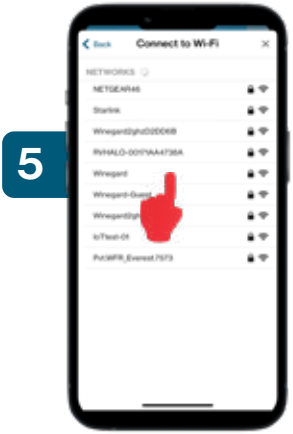

5. Choose the WiFi source you wish to connect to.



6. Enter the correct password for this network and Tap the Join button.



7. This may take a couple of minutes to connect to the network.

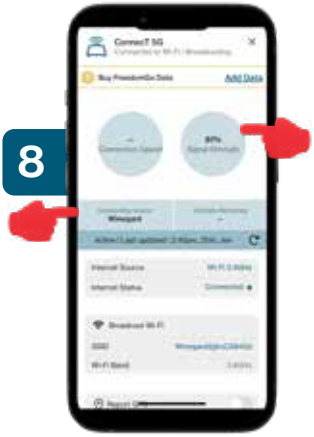

8. Once the Signal Strength and Connectivity Source are filled in you are connected to the internet!

BUYING DATA

Winegard cellular devices have a FreedomGO Powered by either AT&T or T-Mobile SIM card installed, or both. Follow these steps to purchase the plan that matches your SIM and best fits your need.

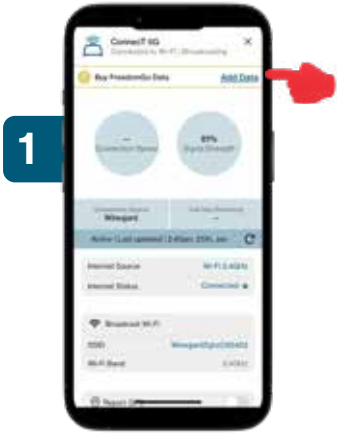

1. Click on the Add Data link.

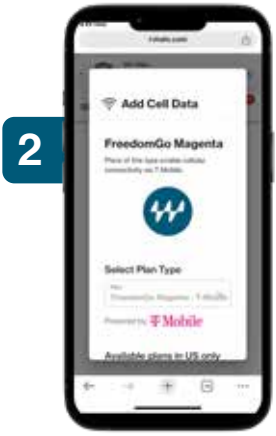

2. Choose the correct plan and fill out the necessary payment information.

US ONLY

Get 10GB for
$59/30 days

Get 25GB for
$99/30 days

Get 100GB for
$149/30 days

FreedomGo powered by
T-Mobile Pay As You Go Plans

US ONLY

Get 10GB for
$59/30 days

Get 20GB for
$99/30 days

US & CANADA

Get 1GB for
$20/30 days

Get 3GB for
$35/30 days

Get 10GB for
$80/30 days

Get 20GB for
$150/30 days

FreedomGo powered by
AT&T Pay As You Go Plans

BUYING DATA (CONTINUED)

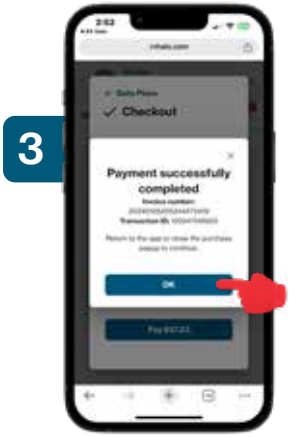

3. A payment notification and email will immediately be issued after purchase. Select the OK button to return to the device home page.

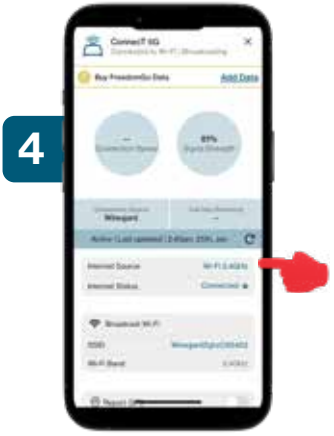

4. Choose the Internet Source option and select Cellular as the source.



5. Once the Signal Strength and Connectivity Source are filled in you are connected to the internet!

NOTE: Once you have a Winegard account for your system you may purchase data any time by signing into your account at rvhalo.com or using the RV Halo app. This can be done away from your RV.

NOTE: All data plans are non-refundable and if the auto renew feature is selected at the time of purchase you must turn it off by accessing your account, ahead of the current active plan's expiration.

ADDING RV HALO SMART SENSOR

The Winegard Connect 5G is compatible with the Winegard RV Halo Smart Sensors. Monitor your RV when you're with the RV or even remotely. Scan the QR code to learn more!



CONTACT CLOSURE

Get alerted when windows or doors are opened or closed.



WATER DETECTION

Get alerted when water is present any area you install the sensor.



MOTION (PIR)

Get alerted when motion is detected in your RV.



TEMP AND HUMIDITY

Great for monitoring pets, refrigerators, freezers or just the RV temperature. Notifications are sent when the temperature or humidity levels get outside a preset range.

NOTE: Remote notifications and other GPS features require a RV Halo Pro Membership:

- Remote Diagnostics
- GPS Services
- Asset Tracking/Geofencing
- Find My RV
- Share My Location
- Weather at My RV
- Travel History & Route Guidance

FCC STATEMENT
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference
in a residential installation. This equipment uses and can radiate radio frequency energy and, if not installed
and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following methods:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and devices.
• Connect the equipment into an electrical outlet on a circuit different from that which the radio receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
FCC CAUTION
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
Only channels 1–11 can be operated. Selection of other channels is not possible.
This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.
FCC Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 25 cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna
or transmitter except in accordance with FCC multi-transmitter product procedures.

This device complies with FCC and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
Le présent appareil est conforme à FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WINEGARD®

Disclaimer:
Although every effort has been made to ensure that the information in this manual is correct and complete, no company shall be held liable for any errors or omissions in this manual. Changes and technological advances are continuously being made in the wireless market. Information provided in this manual was accurate at time of printing. If the Connect 5G does not function as expected, please contact Winegard Company at 1-800-288-8094, email help@winegard.com, or visit our website at www.winegard.com/connect-5g.