


SKA-008 TRAV'LER® ACCESSORY MOUNTING PLATE

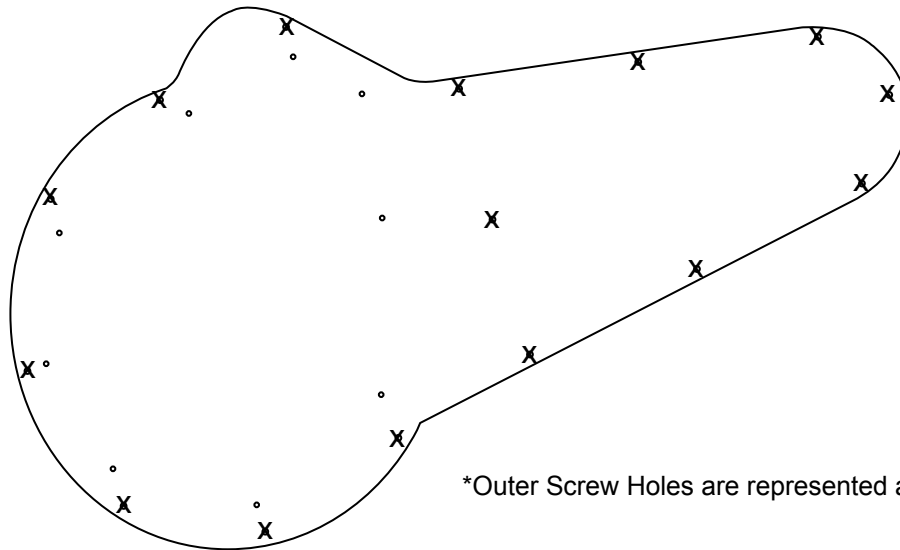

*Outer Screw Holes are represented above by an "x"

Included in this kit:

Mounting Plate
Instruction Sheet
15 Mounting Screws

1. Determine where the TRAV'LER® will be mounted on the roof. Please refer to the TRAV'LER installation manual for more information.
2. Place the SKA-008 Roof Plate on the roof and put a small amount of approved sealant* over each of the 15 outer screw holes on the SKA-008 plate.
3. Screw the mounting plate to the roof using the supplied screws. Running down through the sealant.
4. Cover each of the screw heads with sealant.
5. Allow the sealant to set before installing the TRAV'LER to the plate.
6. The TRAV'LER mounts directly to the plate, simply line up the screw holes on the TRAV'LER with those on the mounting plate and follow the instructions in the TRAV'LER manual.

* Winegard recommends consulting the coach manufacturer to determine the appropriate sealant for your roof.



Winegard Company • 3000 Kirkwood St. • Burlington, IA 52601 • 319/754-0600 • Fax 319/754-0787 • www.winegard.com

Printed in U.S.A. © Winegard Company 2008 2452147 Rev1 3/12